

# JM 型避震器安裝說明

## JM isolator installation guide

安裝前，請確認避震器之型號規格是否正確。

Before installation, make sure the model and the specification are correct.



### 安裝說明

### Installation guide

- 所需工具：公制口徑開口扳手14mm (M8), 17mm (M10), 19mm (M12), 24mm (M16)。

Required tools: open wrench.

- 檢查附件是否齊全，避震器有無缺陷破損。(如圖1)


Check the isolator and other accessories see if they are all completely or having any defects (Fig 1).

- 將避震器放置於與設備的正確安裝位置。(如圖2)

Place the isolator on the correct installation position (Fig 2).

- 鎖緊螺母和墊圈，確保設備和避震器固定。(如圖3)

Fasten the nuts and washers to ensure the equipment feet holes are fixed to the isolator (Fig 3).

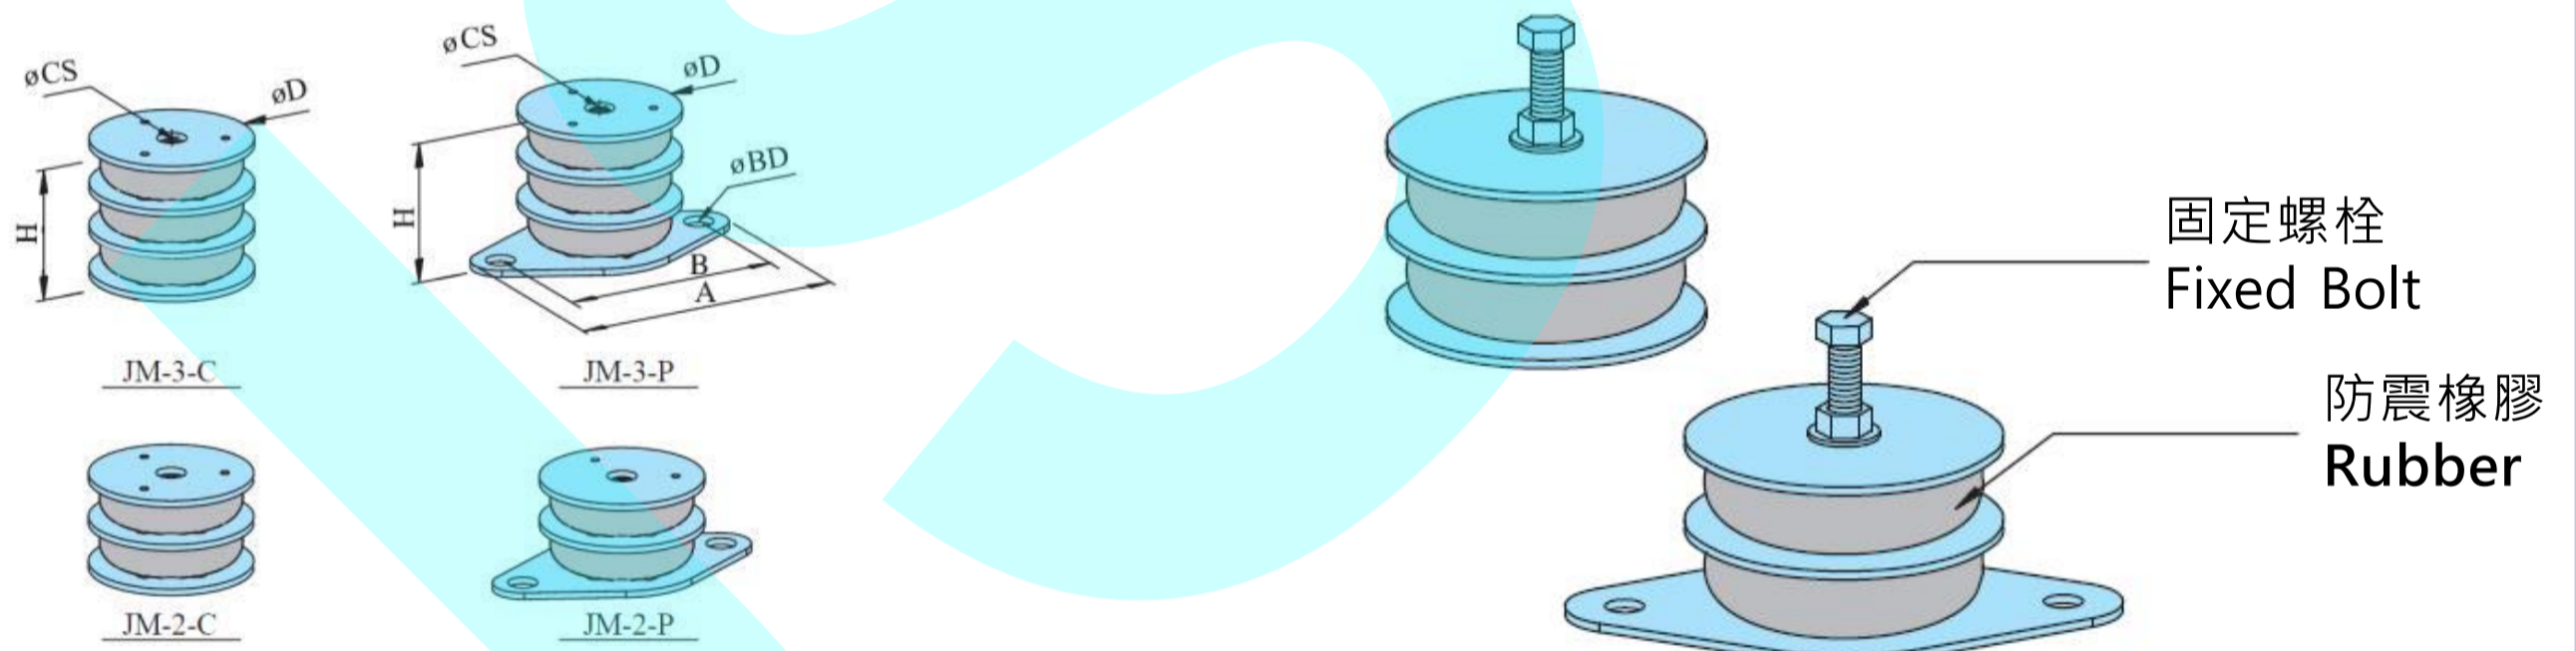

型號 Type	尺寸 Dimension(mm)						荷重 Load (Kgs)		適用撓度 Deflection mm	自然頻率 Frequency Hz	標準荷重 Load Kgs
	D	H	A	B	CS	BD	Min	Max			
JM-0502-C	50	30	*	*	M8	*	25	70	5	8	50
JM-0503-C	50	44	*	*	M8	*	25	70	7	7.5	50
JM-0602-C.P.	60	35	105	83	M8	11	30	80	9	7	60
JM-0603-C.P.	60	51	105	83	M8	11	30	80	13	6	60
JM-0802-C.P.	80	47	140	110	M10	13	60	150	11	6.3	120
JM-0803-C.P.	80	68	140	110	M10	13	60	150	15	5.3	120
JM-1202-C.P.	120	67	210	165	M12	15	120	300	18	5	250
JM-1203-C.P.	120	98	210	165	M12	15	120	300	27	4.2	250
JM-1602-C.P.	160	86	280	220	M16	19	280	700	25	4.4	550
JM-1603-C.P.	160	126	280	220	M16	19	280	700	39	3.5	550

# JM 型避震器安裝說明

## JM isolator installation guide

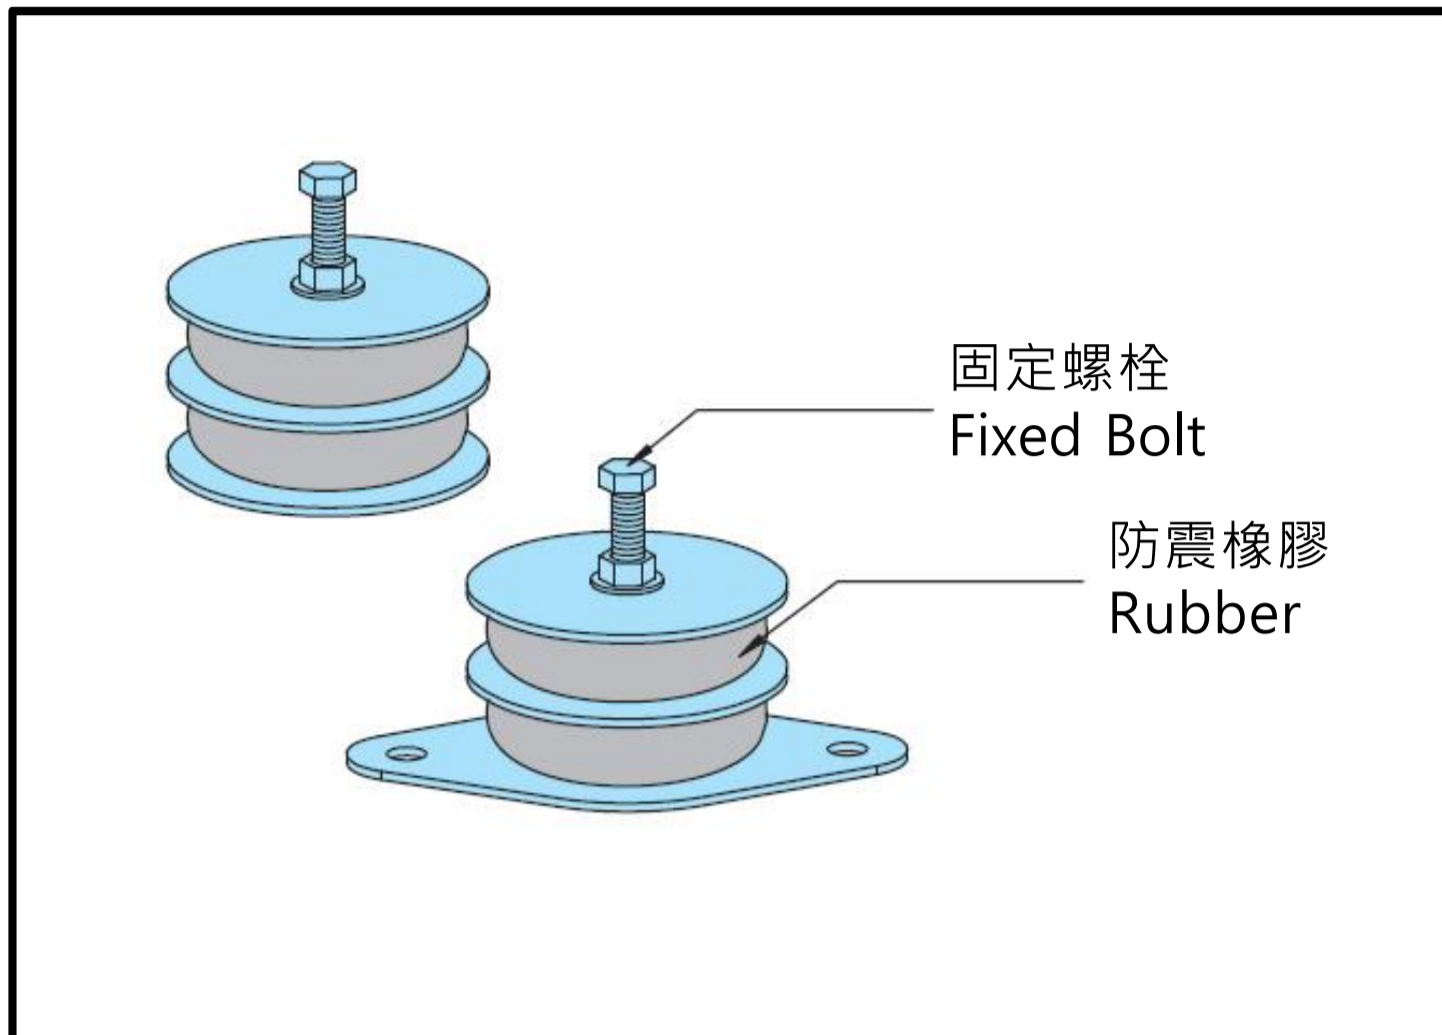


圖1)檢查附件是否齊全，避震器有無缺陷破損。  
Fig 1) Check the isolator and other accessories see if they are all completely or having any defects.

圖2)將避震器放置於與設備的正確安裝位置。  
Fig 2) Place the isolator on the correct installation position.

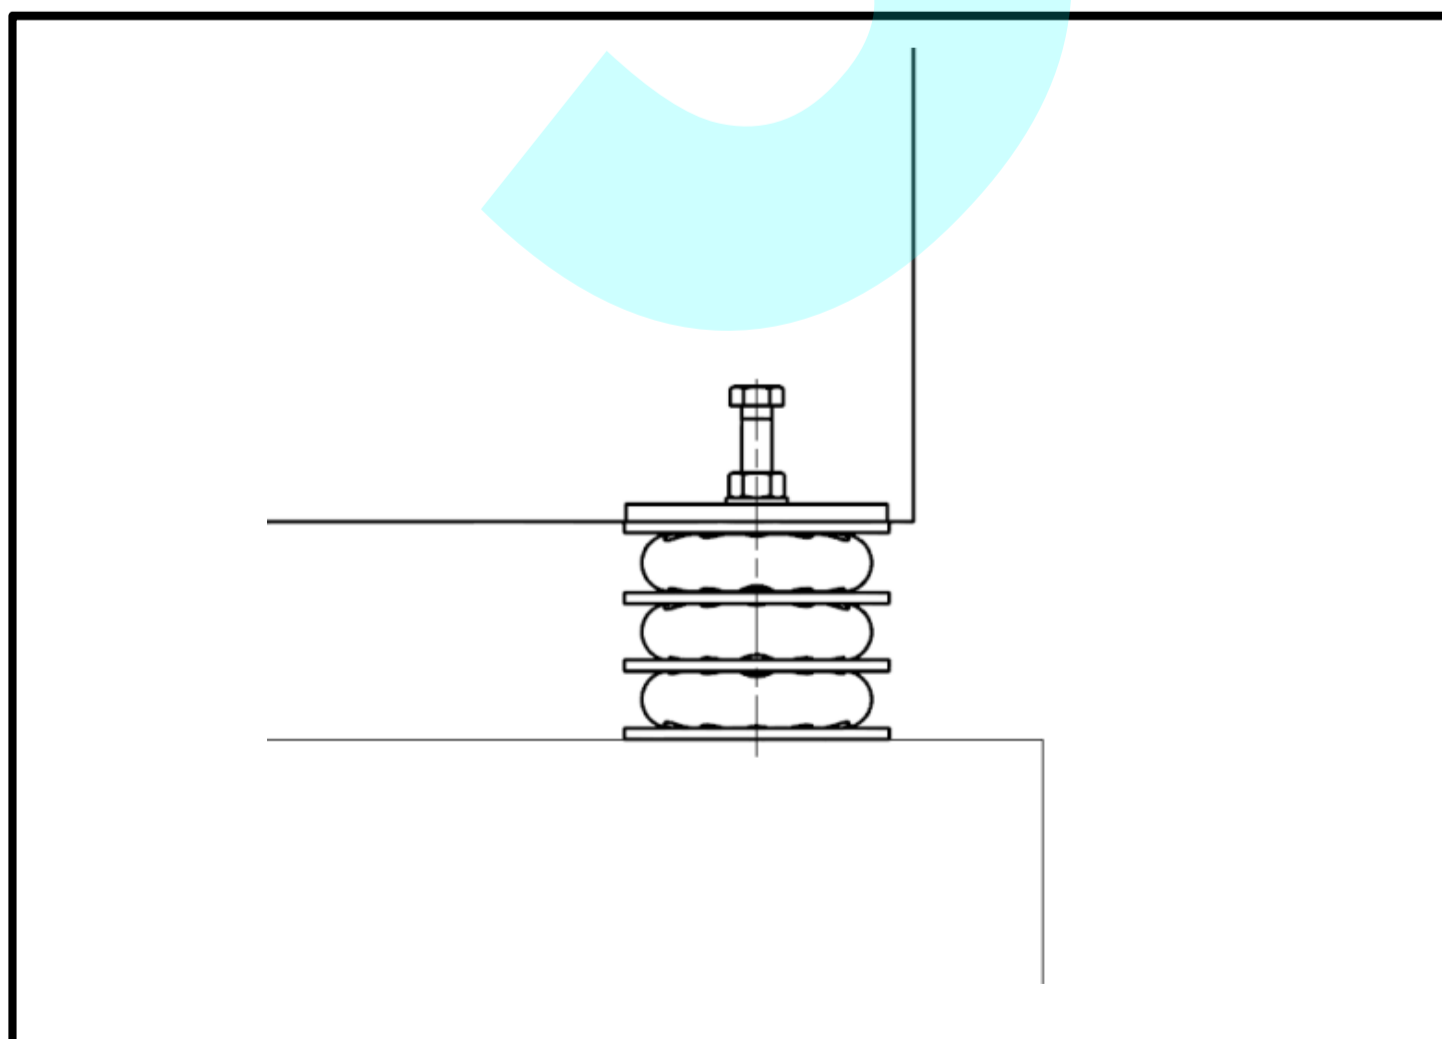
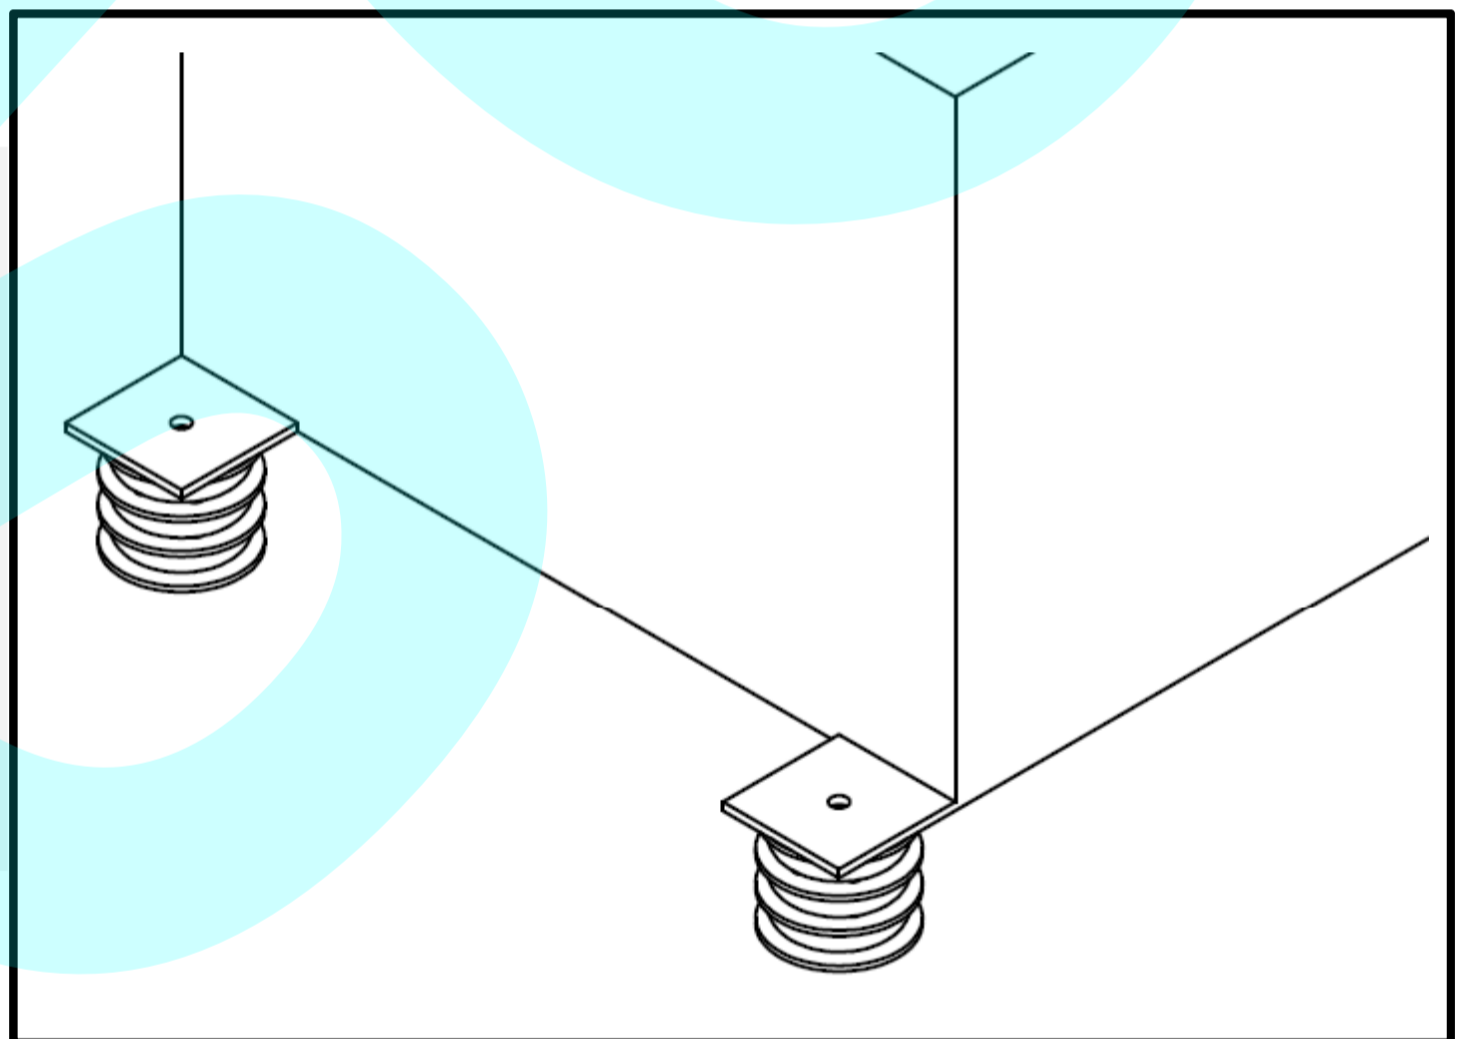


圖3)鎖緊螺母和墊圈，確保設備和避震器固定。  
Fig 3) Fasten the nuts and washers to ensure the equipment feet holes are fixed to the isolator.